


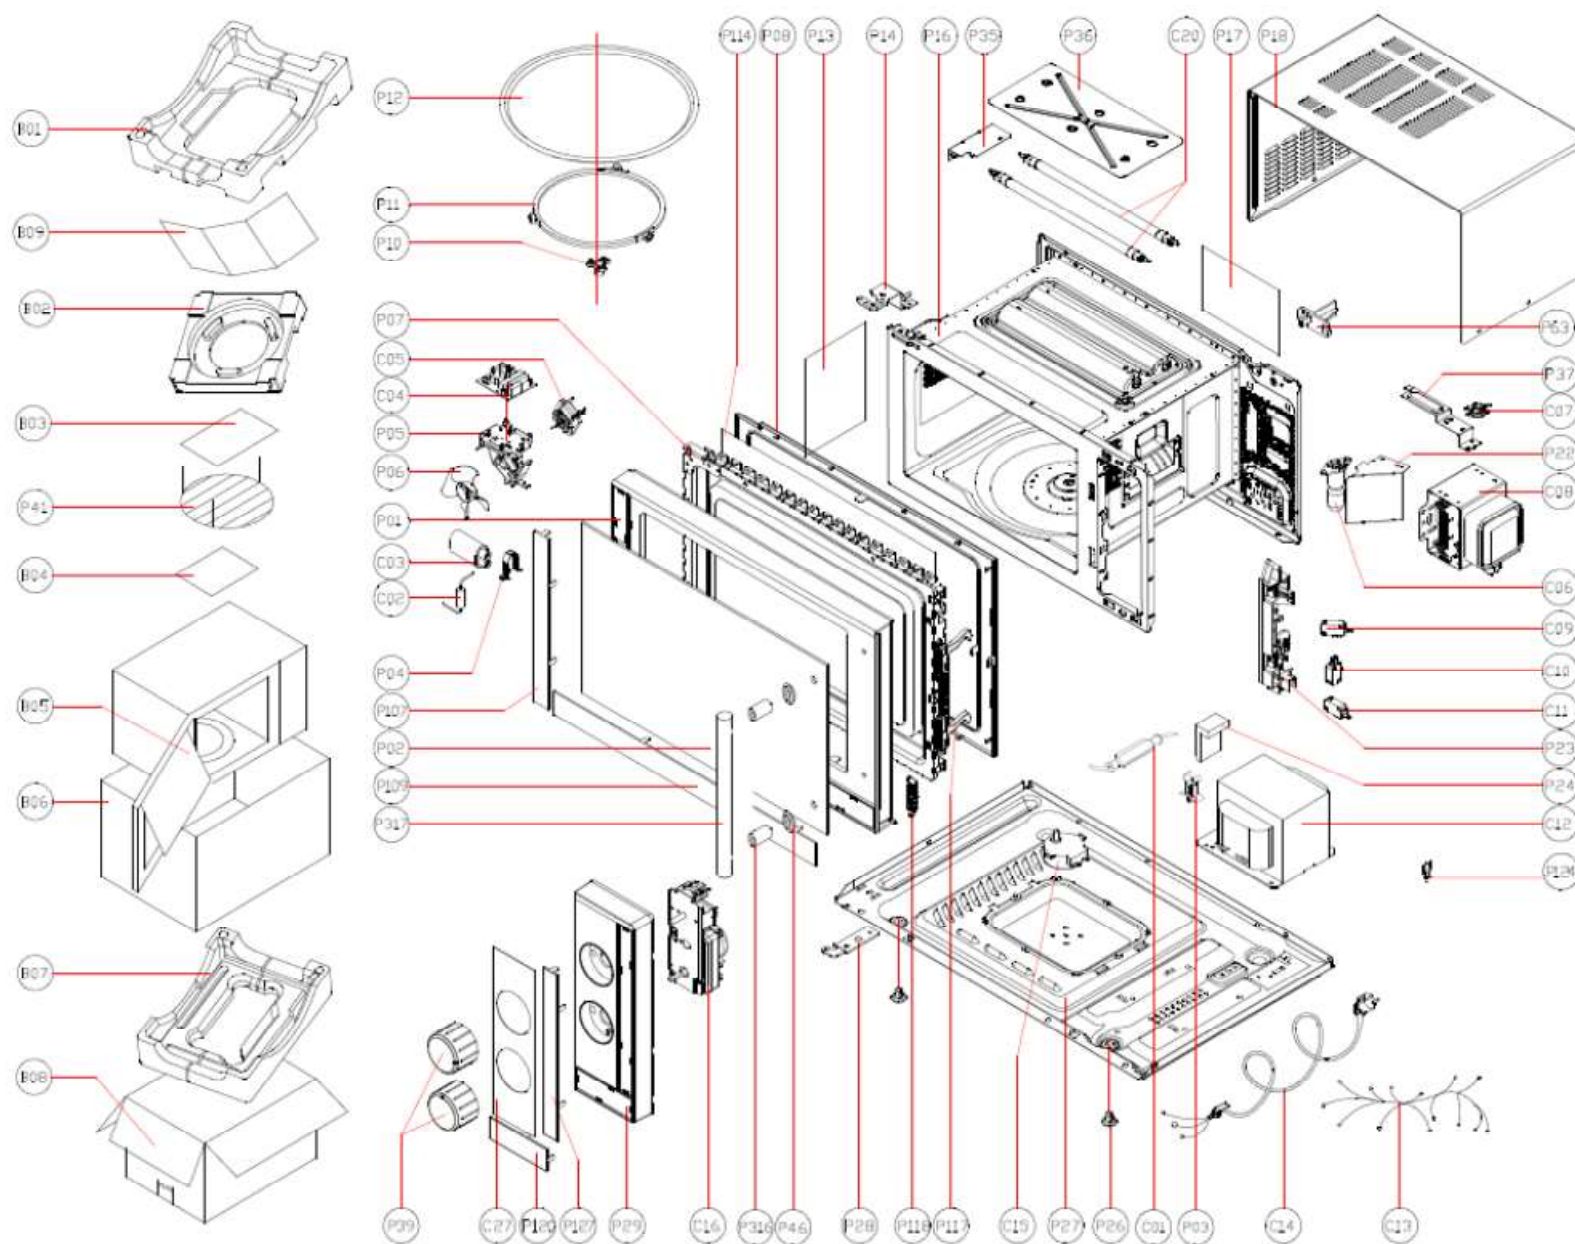

**MICROWAVE OVEN HURAKAN HKN-WP900G**

| Ref. | Part name                 | Quant. |      |                      |   |
|------|---------------------------|--------|------|----------------------|---|
| P01  | door frame                | 1      | P317 | pommel               | 1 |
| P02  | door window board         | 1      | C01  | H.V.fuse             | 1 |
| P03  | fuse socket               | 1      | C02  | H.V.diode            | 1 |
| P04  | capacitor holder          | 1      | C03  | H.V.capacitor        | 1 |
| P05  | fan bracket               | 1      | C04  | noisefilter/fuse     | 1 |
| P06  | fan blade                 | 1      | C05  | fan motor            | 1 |
| P07  | door plate                | 1      | C06  | lamp                 | 1 |
| P08  | shielding board           | 1      | C07  | thermostat 1         | 1 |
| P10  | connector                 | 1      | C08  | magnetron            | 1 |
| P11  | roller ring               | 1      | C09  | microswitch          | 1 |
| P12  | glass turntable           | 1      | C10  | microswitch          | 1 |
| P13  | splash shield mica sheer  | 1      | C11  | microswitch          | 1 |
| P14  | upper hinge               | 1      | C12  | H.V.transformer      | 1 |
| P16  | cavity                    | 1      | C13  | wiring harness       | 1 |
| P17  | rear nameplate            | 1      | C14  | power cord           | 1 |
| P18  | outer enclosure           | 1      | C15  | turntable motor      | 1 |
| P22  | air duct bracket          | 1      | C16  | timer                | 1 |
| P23  | switch mount              | 1      | C20  | quartz tube / heater | 2 |
| P24  | shock absorption rubber   | 1      | C27  | Film patch           | 1 |
| P26  | foot                      | 2      | B01  | upper foam cushion   | 1 |
| P27  | base plate                | 1      | B02  | turntable cushion    | 1 |
| P28  | lower hinge               | 1      | B03  | manual               | 1 |
| P29  | face board                | 1      | B04  | plastic bag          | 1 |
| P35  | heating tube prop         | 1      | B05  | lower foam cushion   | 1 |
| P36  | thermal protection shield | 1      | B06  | carton               | 1 |
| P37  | cutout bracket            | 1      |      |                      |   |
| P39  | knob                      | 2      |      |                      |   |
| P41  | metal rack                | 1      |      |                      |   |
| P46  | handle decoration         | 2      |      |                      |   |
| P63  | buckle                    | 1      |      |                      |   |
| P107 | left door flake           | 1      |      |                      |   |
| P109 | lower frame pad           | 1      |      |                      |   |
| P117 | door hinge                | 1      |      |                      |   |
| P118 | door hinge spring         | 1      |      |                      |   |
| P120 | lower pad                 | 1      |      |                      |   |
| P124 | clamp holder              | 2      |      |                      |   |
| P127 | left panel flake          | 1      |      |                      |   |
| P316 | handle underside bracket  | 2      |      |                      |   |